

NAMUOS

ASSEMBLY & INSTALLATION GUIDE


Toilet paper holder BAUHAUS

MAX LOAD
5 kg

CARE

Wipe with a damp cloth and mild soapy water. Avoid abrasive sponges, solvents, or harsh cleaners

In the box




× 1

Toilet paper holder BAUHAUS



× 1

Allen key

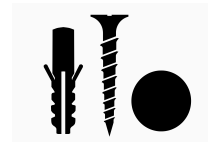

× 2

Screws, wall plugs, screw cups

Assembly

1

Mark the holes

Mark two holes 13 cm (5.12 inches) apart on the wall with a pencil, using a spirit level to keep them level. You can also hold the shelf in place and mark through its holes.

2

Drill the holes

Drill the holes (5 mm diameter and 35 mm deep) straight into the wall at a 90° angle. Insert wall plugs (5 x 30 mm) into the holes. **PLEASE NOTE.** Soft or crumbly walls (plasterboard, old plaster, aerated concrete): drill with a 4.5 mm bit, without hammer mode, to keep the hole from getting too wide.

3

Mount the shelf

Place the screw caps on the screws. Hold the shelf against the wall and insert the screws (3,5 x 32 mm) from inside the shelf. Tighten them with the Allen key.

Thank you for choosing NAMUOS

www.namuos.com · info@namuos.it